



# MALE CONCEALABLE SIZING FORM


SCA-MALE SIZING FORM | REVISED 091412

3120 E. Mission Blvd., Ontario, CA 91761  
 Toll Free: 800-347-1200 / Toll Free Fax: 800-366-1669  
 Email: customercare.bodyarmor@safariland.com

**1** Please Print  
 Officer's Full Name: \_\_\_\_\_ Badge No.: \_\_\_\_\_  
 Department: \_\_\_\_\_ Telephone No.: ( ) \_\_\_\_\_  
 Measured By: \_\_\_\_\_ Date Of Measuring \_\_\_\_\_  
 Distributor's Name: \_\_\_\_\_ PO# \_\_\_\_\_  
**HEIGHT:** \_\_\_\_\_ ft. \_\_\_\_\_ ins. **WEIGHT:** \_\_\_\_\_ lbs.

All measurement points listed below refer to the illustration. Take ALL measurements to the nearest full inch. If rounding is necessary, round UP on Girth and round DOWN on length.

### THE FOLLOWING MEASUREMENTS SHOULD BE TAKEN *STANDING*

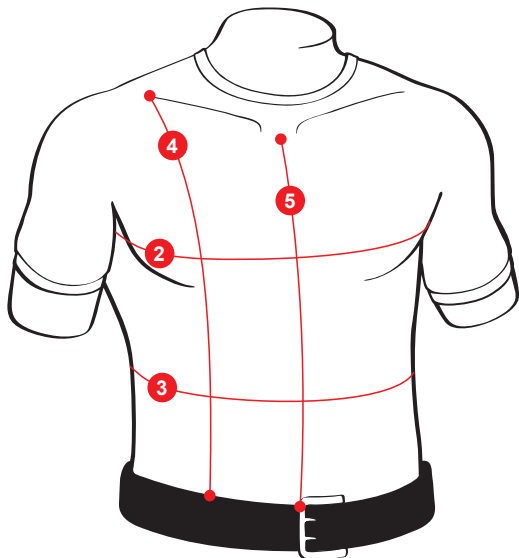

**2 FULL CHEST MEASUREMENT**  
 Using a soft tape measure, measure around the back, directly under arm pits, meeting across center chest front. \_\_\_\_\_ ins.

**3 TOTAL GIRTH MEASUREMENT**  
**Use this Total Girth Measurement for selecting a Front/Back Panel Width below.**  
 Measure waist at widest circumference in between the chest and the top of the duty belt. Add the desired overlap to the girth measurement to achieve "Total Girth" measurement.

**GIRTH \_\_\_\_\_ + OVERLAP \_\_\_\_\_ = TOTAL GIRTH \_\_\_\_\_ ins.**

#### Overlap Calculation


- Butt Fit – add 1"
- 1" Overlap – add 3"
- 2" Overlap – add 5"

**FRONT PANEL WIDTHS:** 12 14 17 20 22 25 28 30 35 40

**BACK PANEL WIDTHS:** 12 14 17 20 22 25 28 30 35 40

**NOTE:** Front panel must be as wide or wider than back panel to allow for wrap-around coverage.

### THE FOLLOWING MEASUREMENTS SHOULD BE TAKEN *SEATED*

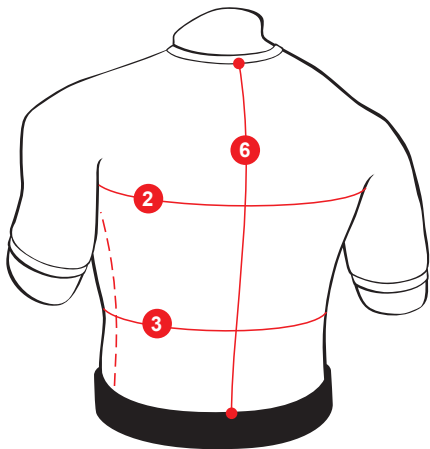

**4 FRONT SIDE LENGTH MEASUREMENT**  
**Use this Front Side Length Measurement for selecting a Front Panel Length below.**  
 Use soft measuring tape. Place tape at bottom edge of clavicle bone and measure straight down to top edge of duty belt. Subtract 1" from this measurement.

**FRONT SIDE \_\_\_\_\_ - 1" = FRONT SIDE LENGTH \_\_\_\_\_ ins.**

**FRONT PANEL LENGTHS:** 10 11 12 13 14 15 16 17 18 19 20 21 22 23

**NOTE:** Front/Back panel lengths should not be more than 2" difference.

**5 FRONT CENTER LENGTH MEASUREMENT**  
 Identify the clavicle notch. Measure from the base of the clavicle notch to the top of the duty belt. Subtract 1" from this measurement.

**FRONT CENTER \_\_\_\_\_ - 1" = FRONT CENTER LENGTH \_\_\_\_\_ ins.**

**NOTE:** Front/Back panel lengths should not be more than 2" difference.

Fill out for verification check only

### THE FOLLOWING MEASUREMENT SHOULD BE TAKEN *STANDING*

**6 BACK LENGTH MEASUREMENT**  
**Use this Back Length Measurement for selecting a Back Panel Length below.**  
 Identify the bottom edge of the shirt collar. Measure from the bottom edge of the shirt collar to the top of the duty belt. Multiply that measurement by .80.

**BACK MEASUREMENT \_\_\_\_\_ × .80 = BACK LENGTH \_\_\_\_\_ ins.**

**BACK PANEL LENGTHS:** 10 11 12 13 14 15 16 17 18 19 20 21 22 23

**SIZE:**  -     
 FRONT PANEL WIDTH      FRONT PANEL LENGTH      BACK PANEL WIDTH      BACK PANEL LENGTH